

Your Avi/Impact Vest now includes an Upgraded Venturi


IMPORTANT: Follow the instructions on this sheet to deflate the Airbag.

Disregard the "TO DEFLATE THE BLADDER" section in the User Manual. No tools are now required to deflate the Airbag.



Description of Parts

1. Airbag
2. Rubberized Cover
3. Hose to cylinder
4. Venturi

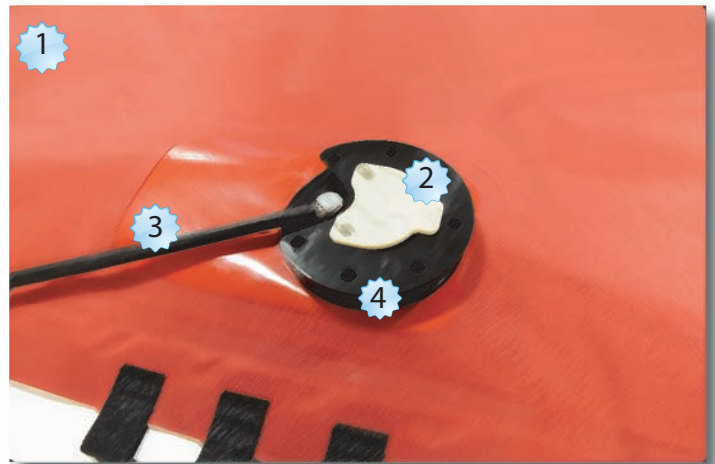

To deflate the Airbag

1. Lift the rubberized cover (from end opposite the screws) on top of the Venturi
2. Depress and hold down the yellow valve
3. Apply pressure to the airbag so that it deflates (you should feel air exiting out of the venturi)
4. After the airbag is fully deflated, press the tab of the rubberized cover back into place.



Repacking Instructions for Airbag

IMPORTANT: Follow the instructions on this sheet to repack the Airbag.

Disregard the "TO REPACK THE BLADDER" section in the User Manual. No tools are now required to deflate the Airbag.

1. Lay the airbag flat, venturi side down
2. Fold both sides of the bladder inwards so that the outer edges line up with the outer edge of the webbing straps
3. Fold the left side inwards (using the edge as the fold point) and then the right side on top of it. The airbag should now be slightly narrower than the pocket on the vest
4. Starting from the free end of the airbag, fold the airbag towards the vest end. Use approx 6" folds.
5. Steps 1-4 may need to be repeated to remove any remaining air (see other side of this sheet for details)
6. Fold the airbag back over and fit it into the pocket.
7. Check that the hose is not tangled (see photo 6)
8. Fit the padded cover over the venturi (see photo 8)
9. Finally, Press down on the Velcro around the perimeter of the pocket flap. Start at one end and work around the perimeter until all the Velcro is joined securely.

